


## 9TD62

### Rompe-tuercas



- Para extraer las tuercas rotas o demasiado apretadas sin deteriorar la barra roscada

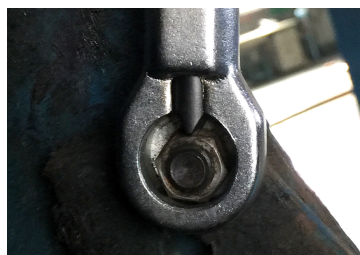

Capacidad (mm)

Capacidad (inch)

Hexágono de arrastre

9TD601

9 ~ 12

5/16" ~ 1/2"

12 mm

9TD602

12 ~ 16

1/2" ~ 5/8"

14 mm

9TD603

16 ~ 22

5/8" ~ 7/8"

19 mm

9TD604

22 ~ 27

7/8" ~ 1-1/8"

21 mm