



## 9BB13

### Boot clamp plier

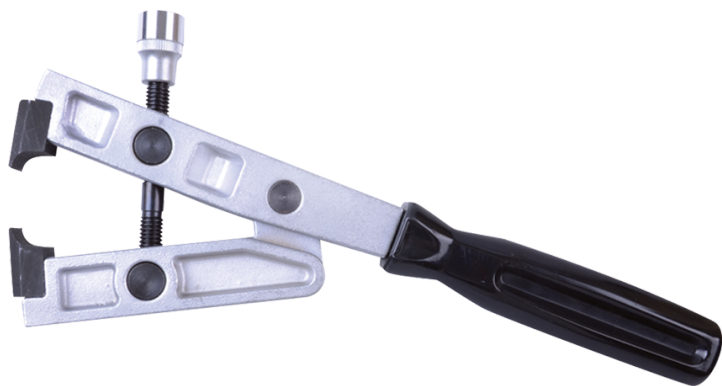

- Boot clamp pliers on stainless steel shaft
- Can be used with a 3/8" torque wrench
- For Audi, VW, Ford et Opel

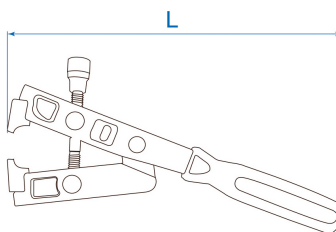

9BB13

L (mm)

278

ø (mm)

45

Weight (g)

887