

Home > Automotive tools > Engine > 9BB13

9BB13

Boot clamp plier

- Boot clamp pliers on stainless steel shaft
- Can be used with a 3/8" torque wrench
- For Audi, VW, Ford et Opel














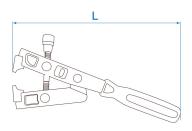

| KING TONY | L (mm) | Diameter (mm) | Weight (g) |
|-----------|--------|---------------|------------|
| 9BB13 | 278 | 45 | 887 |